 


**GREENIS<sup>®</sup>**

POWER BLENDER

FGR-8800

**GREENIS<sup>®</sup>**

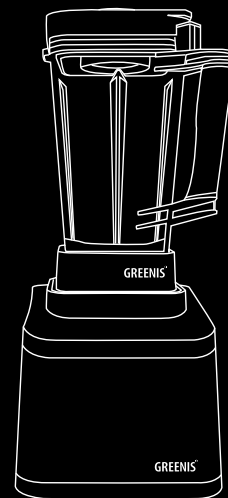

---

Ningbo Greenis Home Appliances Co., Ltd.  
[www.greenishome.com](http://www.greenishome.com)

## WELCOME

- Congratulations! Thank you for choosing Greenis product and you are now the proud owner of Greenis BLDC Power Blender. Greenis BLDC Power Blender is a revolutionary appliance featuring ground-breaking innovations in order to redefine user experience with blenders. **Its lower noise, smart control and powerful force will amaze you in every way!**
- To ensure that Greenis is in proper condition and you can make the most out of it in years ahead, please take the time to read through the user manual for proper use and better maintenance.
- All content in this manual is for reference only and if you find any information unspecified please inform us for supplementing purpose in next edition. Its design and workings are subject to change without warning due to continual product development.
- We hope you enjoy the experience with Greenis as it helps you embark on a journey to richer nutrition and better health!

## TABLE OF CONTENTS

<b>01</b>	>Welcome
<b>02-03</b>	Important Safeguards
<b>04-05</b>	Product Components
<b>06-08</b>	How to Use It
<b>08-09</b>	Use Precautions
<b>09</b>	Cleaning and Maintenance
<b>10</b>	Product Safety Instructions
<b>11</b>	Troubleshooting
<b>12</b>	What's in the Box/Product Specifications

## IMPORTANT SAFEGUARDS

- **To ensure safety please read through the manual before using and keep the manual where it is easily accessible. This product is intended for household use only and please follow instructions of use and assembly in the manual.**
- Read all instructions.
- Please ensure the current, voltage and frequency are in accordance with the standard in your country.
- 1. The appliance is not to be used by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction.
- 2. Close supervision is necessary when any appliance is used by or near children.  
To avoid danger of electric shock, please DO NOT immerse the motor base in water (or any other liquid) or pour water onto the machine.
- Please unplug the machine if it is to be in long-time disuse. Unplug from outlet when not in use, before putting on or taking off parts and before cleaning.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions, or is dropped or damaged in any manner. Contact customer service for information on examination, repair, or adjustment.
- It may cause fire, electric shock or human injury if using unauthorized parts & accessories or refitting machine without authorization.
- DO NOT leave the machine unattended when it is in use.
- When using the machine please ensure water or any other liquid in the jar does not exceed maximum scale marked on the jar surface.
- DO NOT operate the machine with no ingredient or water inside the jar.
- Please keep the machine away from intense heat. DO NOT place it on a cloth in case of damage to parts.
- This product is intended for indoor use only. Do not use outdoors.
- DO NOT use the appliance for more than 30 minutes continuously as the motor may burn out; use it again until the appliance has cooled down. (To prolong the service life of the product, please pause for 45 minutes to let the motor cool down after the use.)
- To reduce the risk of injury, never place cutter-assembly blades on base without jar properly attached.
- Blades must be assembled, disassembled and changed by the manufacturer, it's service agent or similarly qualified persons in order to avoid a hazard.

## IMPORTANT SAFEGUARDS

- The use of attachments, including canning jars, not recommended by the manufacturer may cause a risk of injury to persons.
- Do not let cord hang over edge of table or counter.
- Keep hands and utensils out of container while blending to reduce the risk of severe injury to persons or damage to the blender. A scraper may be used but must be used only when the blender is not running.
- Be careful when handling the sharp cutting blades, emptying the jar and during cleaning.
- Be careful if hot liquid is poured into or blender as it can be ejected out of the appliance due to a sudden steaming.
- Switch off the appliance and disconnect from supply before changing accessories or approaching parts that move in use.
- Please secure the lid and measuring cup in place before use. Always operate blender with cover in place. Do secure the lid when making hot drinks (soups) and start with low speed as otherwise high speed may lead to liquids splashing to cause injuries.
- The motor will automatically stop when encountering work overload as the interior temperature detection system is activated to protect the machine from risk of burning out. It can only get back to work after cooling off for 45 minutes.
- Blades are sharp. Handle carefully. Please be careful when cleaning.
- Do avoid contact with any moving part.
- The product is fitted with tamper and please ensure you use the tamper when the lid is secured on the jar.
- DO NOT place any other implement like spoons, forks and knives into the jar as they may cause damage to blades and other parts.
- Flashing light indicates ready to operate. Avoid inadvertent contact with the touch screen.

## SAVE THESE INSTRUCTIONS



 
**Warning!**  
Electric Shock!  
DO NOT use plug adapter or extension cord.



**Attention:** Failure to follow safety and use instructions shall void the product warranty and may cause severe damages or injuries.


## PRODUCT COMPONENTS

- |                             |                            |                          |
|-----------------------------|----------------------------|--------------------------|
| <b>01. Measuring cup</b>    | <b>06. Jar base</b>        | <b>11. Control panel</b> |
| <b>02. Lid</b>              | <b>07. Blades</b>          | <b>12. Power cord</b>    |
| <b>03. Water-proof ring</b> | <b>08. Blade plate</b>     | <b>13. Motor base</b>    |
| <b>04. Tamper</b>           | <b>09. Shock-proof mat</b> | <b>14. Foot pads</b>     |
| <b>05. Jar</b>              | <b>10. Drive socket</b>    | <b>15. Spatula</b>       |

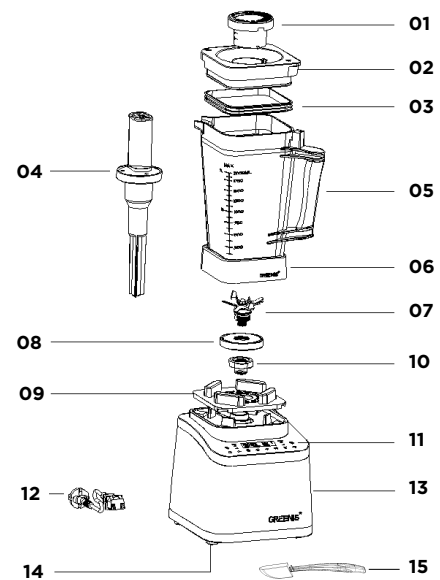

## PRODUCT COMPONENTS
 
### Touch Control Panel

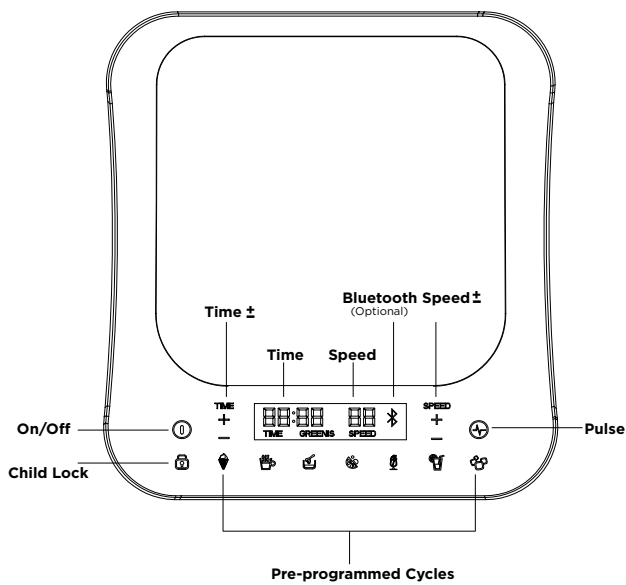

## HOW TO USE IT

### Child Lock “🔒”

- The “Child Lock” light will be flickering when the touch control panel is locked to prevent unintended operations.
- Hold “Child Lock” button for 3 seconds to unlock the touch control panel.
- The control panel will get automatically locked if without being operated for 1 minute.

### On/Off “⏻”

- Tap “On/Off” button to start working after setting the cycle, and tap it to stop during work.

### Bluetooth “📶”

- The Bluetooth function will only work when connected to mobile phone.
- The Bluetooth light will be flickering before connection and be normally on during connection.

### Time±

- Tap “Time+” or “-” button to adjust time with an increase or decrease of 5 seconds per touch.
- Hold “Time+” or “-” button to quickly adjust time within 0 - 30 minutes.
- Tap “On/Off” to return to 0.

### Speed±

- Tap “Speed+” or “-” button to increase or decrease speed within 1 - 10 variables, namely 1, 2, 3, ..., 10.
- Quick adjustment is not available with speed.








### Pulse “⚡”

- Hold “Pulse” button to keep working at the highest speed 10.
- Release the button to stop.

## HOW TO USE IT

### Pre-programmed Cycles

Unlock "Child Lock" and select desired pre-programmed cycle. Tapping "On/Off" the unit will start working as per selected cycle and the machine will automatically stop upon completing the cycle. (Tap "On/Off" to stop during the process.)

Picture	Cycle	Recipe
	Ice Cream	3 tbsp granulated sugar 350g frozen blueberries
	Whole Juice	1/4 Cucumber 1 Celery 1 Apple 600ml Water 9 Ice cubes
	Milkshake	2 frozen bananas 1/4 cup chocolate milk
	Smoothie	150g Fresh sliced pineapple 500g Ice grains 300ml Pineapple juice
	Sauce	500g Salted peanuts (tamper required)
	Hot Drinks	150g Soaked soybeans (for better flavour soaked in boiling water for 0.5 h in advance) 500ml Boiling water 60g White sugar
	Ice Cubes	9 - 12 Ice cubes

## HOW TO USE IT

### IMPORTANT!

- Make sure the lid is securely placed on the jar if tamper is to be used. Shut down the blender before placing tamper through the hole of lid, in case of food splashing to cause injuries.
- Do not use other implements to replace the tamper if it is missing, which may otherwise cause injuries.  
Please contact local dealer to purchase replacement part.

## USE PRECAUTIONS

### About measuring cup, lid and seal ring:

- Place the measuring cup onto the lid (place measuring cup through the central opening of lid and twist clockwise to fasten) and place the lid onto the jar securely. When placing the lid on the jar please make sure the corner of lid with "lock sign" aligns with the corner of jar near the jar handle.
- The machine will not start unless the lid is securely in place.
- Make sure the lid is securely placed on the jar and the machine is not running before putting the tamper.
- The seal ring around the lid is detachable. When cleaning remove seal ring from the lid to thoroughly clean away residues stuck inside the seal ring and the lid.

### Other important precautions:

- Stirring ingredient that is fermentative or dry (little water content) for a long time may cause over-heating and thus trigger overheating protection mechanism built inside the motor. Therefore please start with low speed and change to high speed if the ingredients are thick or rather dry. If it's still difficult to stir, please shut down the power, reduce amount of ingredients or add liquid to decrease viscosity.
- The motor will stop working when overheated. Unplug the blender and cool down the motor for 45 minutes in a drafty place or in front of a fan.
- During the operation, make sure the lid and measuring cup are fastened tightly, in case the food inside would splash out and cause injuries.
- During the operation, DO NOT put hand, any tool (like spoon), or other hard object into the blender jar, in case of any danger or damage.
- When making hot drinks (like soybean milk, rice paste, pottage, etc.), make sure the lid and measuring cup are fastened tightly, and set the speed from low speed to high speed.

- When making sauces (like almond paste, jam, peanut butter or sesame paste, etc.), stuffing, or shell grains, the volume of ingredients must be among 3 cups to 5 cups; DO NOT operate continuously for a long time, in case there will be scorched flavor because of overheating. Too many ingredients may also cause overload, triggering motor's over-temperature protection.
- Please place liquid and soft ingredients first before hard ones like ice cubes.
- DO NOT remove the jar until the blades come to a full stop. Otherwise it may cause damages to drive socket.
- Please stop the machine once smelling any scorching smell. It may be caused by overload of ingredients or the fact blades and drive socket are not fully engaged.
- It is recommended to operate the machine no more than 10 minutes at a time.

## CLEANING & MAINTENANCE

**Please ensure the blender is unplugged before cleaning or maintenance.**

- Do not immerse motor base or power cords into water or any other liquid.
- Use soft cloth or sponge to wipe clean the surface of jar. Remove the measuring cup and seal ring before proceeding to cleaning.
- Rinse the jar with clean water after each use. Or you can add 2 cups of clean water (1 L) into the jar, secure the lid, and tap button "⏻" to clean.
- Lay down the jar horizontally in a drafty place or place it upside down to let it dry naturally. Do not immerse it entirely in water.
- Do not rinse motor base with clean water. Use soft cloth to clean instead.

**Attention:**

When drying the machine by placing it in an upside-down position, please wipe away leftover water at the bottom of the jar. Keep it away from the sink in case of any water dripping into the bottom of the jar and potentially rusting interior key components like metal bearing.

**Warm Prompts:**

 
To thoroughly clean the inside of the jar and leftover dirt on the blades and ensure durability of jar and blades, it is recommended to add some clean water and lemon into jar, secure the lid and press button "PULSE" to quick clean for 2-3 times. Pour away water and repeat the step.

### Simple cleaning:


**Attention: Do not immerse jar into water**

1. Add 750 ml clean water and 1-2 lemon slices, tap button "⏻" (running for 1 min 56s).
2. Pour away dirty water and repeat step no.1.
3. Pour away dirty water and wipe it clean with cloth. Dry the jar in a drafty place.

## PRODUCT SAFETY INSTRUCTIONS

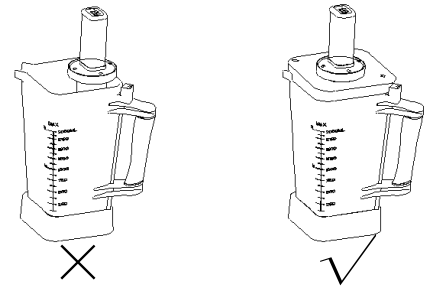

Correct way of using tamper

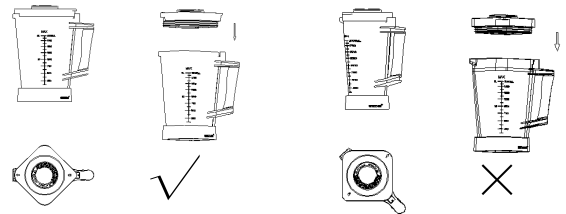 

Correct way of assembling lid

Incorrect way of assembling lid

Point the lid corner with a lock sign towards the direction of the jar handle, in order to activate the safety switch.

## TROUBLESHOOTING

Fault	Possible cause	Possible solution
The unit does not work after being connected to power (no display on the control panel).	The jar is not securely placed on the motor base or the lid is not in place.	Remove the jar or lid and place them properly.
The LCD display indicates E2 or E3.	E2 means motor overheating protection is activated. E3 means motor overloading protection is activated.	When the LCD display indicates E2, cool off the machine for 45 minutes and reduce ingredients. When the LCD display indicates E3, remove big chunks of ingredients that clog the blades.
Bluetooth cannot be connected.	The cell phone's Bluetooth is not activated or it is out of effective distance.	1. Try to open cell phone's Bluetooth again. 2. Place the cell phone as near as within 3 meters from the machine.
The machine suddenly stops during the operation.	The lid is blown out by the food.	Place the lid back in position and restart the machine.
Abnormal noise during the operation.	1. Either the jar or mat is not correctly assembled. 2. Foreign objects are stuck on the drive socket.	1. Switch off the machine and remove the jar. Check if there are any foreign objects on the mat. Place the jar back in position again. 2. Remove the measuring cup from the lid and a 6-cm-wide opening is revealed. Use the tamper to stir through the opening.
All lights are on while touch buttons do not work.	1. Caused by capacitance interference of touch panel. 2. Tap any two of buttons simultaneously.	1. Unplug the machine. Plug again and tap "On/Off" button to restart. 2. Release one button (only touching one button at a time).

**Attention:**

Above are general problems users may encounter and possible solutions they can adopt. For other problems with the machine, please contact local after-sales for repair purpose. Do not open the machine and repair by yourself.

## WHAT'S IN THE BOX

Motor base	1 unit
Jar	1 unit
Lid	1 unit
Measuring cup	1 unit
Tamper	1 unit
Spatula	1 unit
Cleaning brush	1 unit
Drive socket (spare)	1 unit
Seal ring for lid (spare)	1 unit
User manual	1 unit

## PRODUCT SPECIFICATIONS

Model	FGR-8800
Voltage/Frequency	See rating label on base of product
Rated power	1000W
Dimensions	21(L)*22.5(W)*50(H) cm



**WEEE**

Correct Disposal of this product

This marking indicates that this product should not be disposed with other household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.

**Warning:** Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

**Note:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules.

These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

"This equipment complies with FCC RF radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with a minimum distance of 20 centimeters between the radiator and your body."